

**bau
bau
wall**



*check out
our
video guide*

Wallpaper installation instructions

Your new wallpaper is cut and divided into 49 cm wide strips, and in length as you ordered. Each strip is numbered, in the order they should be hung. Hang the strips from left to right. Place the wallpaper strips edge to edge.



Tools that will come handy in the process:



Ruler



Pencil



Brush



Bucket




Spirit level



Paste Roller



Sharp Knife

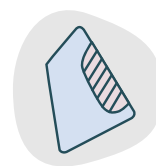

Smoothing



Cloth

Prepare

Ensure the wall is clean, smooth, and dry. The wall should be clean from any old wallpaper or uneven items. Remove any old nails and fill any cracks. Should the wall surface be porous, apply a primer coat or pre-paste before hanging the new wallpaper.

You should also prime the wall surface if it has bright colours, that could be visible through your new wallpaper.

Switch off the electricity mains and remove any socket covers.

Hanging the wallpaper

1. Take the included wallpaper paste (for fleece material wallpapers) and mix it with cold water until its smooth and thick. Leave it for 20 minutes. 100 g of paste requires 2 litres of water and is enough for about 12 m².
2. Before hanging, please make sure no wallpaper strips are missing or damaged. The strips are numbered at the top, in the order they must be hung. Wallpaper strips are intended to be hung from left to right.
3. Make sure the wallpaper strips are hung straight. It is essential to hang the first strip straight. Using a spirit level, a measuring instrument, and a pencil, draw vertical markings one panel width (49 cm) in from the corner.
4. Apply the paste directly to the wall, on the area of marked first wallpaper strip size. Use a long roller or a brush to apply the paste. Apply the paste one panel width in advance, as otherwise it may dry off.
5. Edge to edge, hang the panels. There must be no overlap between the panels. Press the panels together firmly at the seams. Make sure the pattern matches up with the following panel and try to get as little wallpaper paste as possible on the front of the wallpaper, as it may show when dry. After hanging each strip, trim any excess paper using a sharp knife and with the help of a smoother.
6. From ceiling to floor, smooth down the wallpaper strips. Start in the middle and work your way out to the edges with your hands and/or a wallpaper smoother. Once the wallpaper has dried, any little bubbles or wrinkles will vanish. If there are any paste spots, remove them with a damp cloth or sponge, but don't rub.
7. Cut off any excess paper. Trim any excess paper with a sharp knife, and smoother or ruler, once all the wallpaper strips have been hung.
8. And you are done! Wait for a day to allow the wallpaper to properly dry. Enjoy your new stunning wall! We can't wait to see the result as well – share and tag it [@baubauwall](#) [#baubauwall](#)